
POLE CLAMP MOUNT FOR LS9160 & LS9180

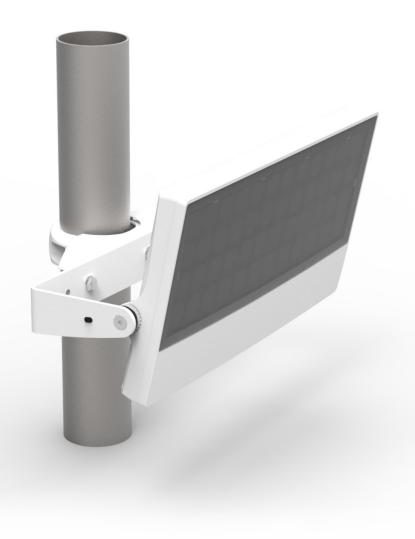



For use with LS9160 & LS9180

**LS6317** 3" Pole Clamp **LS6318** 4" Pole Clamp **LS6319** 4.5" Pole Clamp **LS6320** 5" Pole Clamp

### **READ ALL SAFETY INSTRUCTIONS FIRST**

- > Follow instructions carefully, failure to do so will void warranty.
- > Ensure installation complies with local law and applicable standards.
- This instruction is for the mechanical installation of the pole clamp only. For details on electrical connections refer to luminaire specific instructions.
- > Do not make modifications or alter the product.

**LUMASCAPE ASIA PACIFIC** Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com.au

POLE CLAMP MOUNT FOR LS9160 & LS9180




## Assemble Brace and Mounting Bracket

Step 1 Start by attaching the brace to the pole mounting bracket as shown below.

Get all the components into place, do not assemble the bracket until you got it around the pole as shown in step 2.

NOTE: remember to insert the hex nut into the back of the mounting bracket.

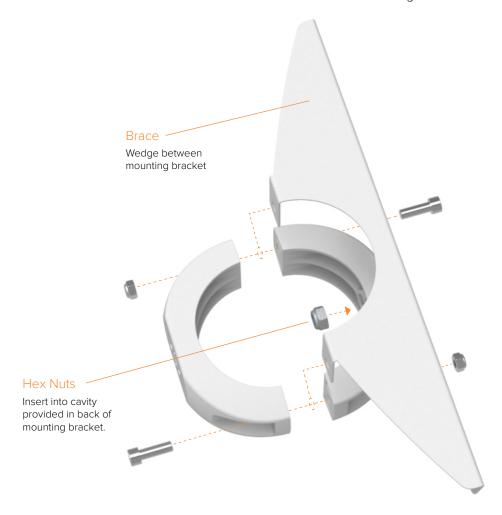



POLE CLAMP MOUNT FOR LS9160 & LS9180



## Attach Bracket and Brace Assembly to Pole

Put the brace and pole mounting bracket around the pole and tighten screws. Make sure cap head screws face in opposite direction to brace to allow easy access. HINT: Leave one of the mounting screws a bit loose, so you can rotate the bracket around the pole. Once it faces into the desired orientation, tighten the second screw to lock the bracket into place.

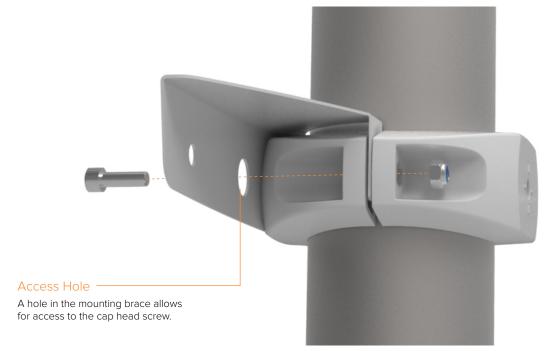

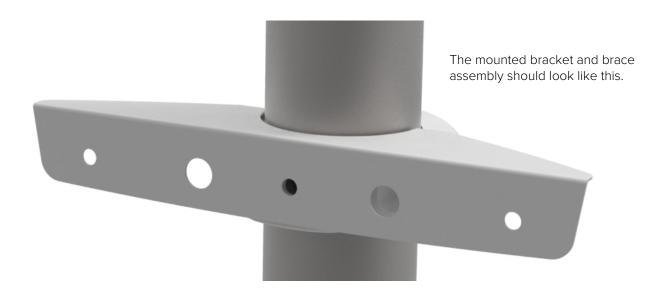

POLE CLAMP MOUNT FOR LS9160 & LS9180



# Attach Luminaire to Bracket and Brace Assembly

Bolt the luminaire to the brace as shown below. Please note that at this time the luminaire can be rotated around the centre bolt to face in an upward or downward direction. NOTE: Do not use centre screw longer than the one provided as it will damage the mounting bracket and void warranty. Use washers. Adjust luminaire tilt and tighten hex screws to lock luminaire tilt into place. Make electrical connection on accordance to local wiring rules. Refer to luminaire installation instructions for details on electrical connections.





## **QUESTIONS** Contact us at details below.

**LUMASCAPE ASIA PACIFIC** Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com.au